





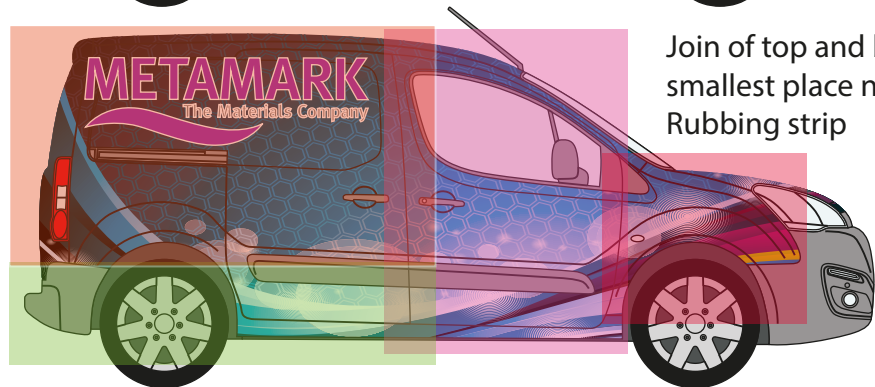
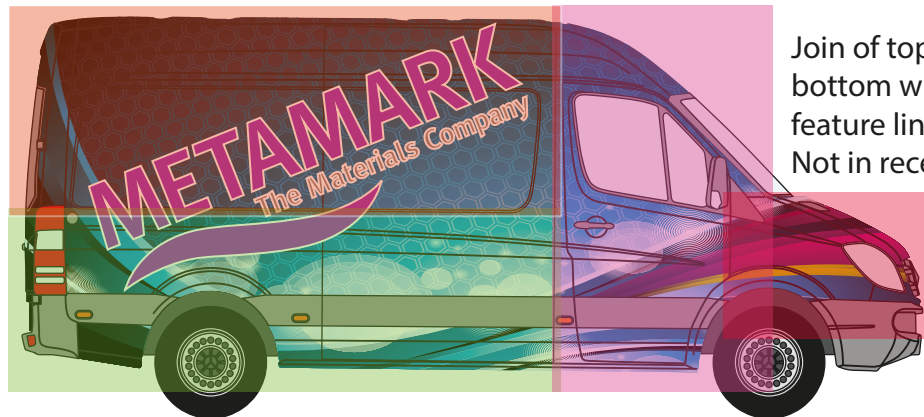


MetaCast® and MetaWrap have been developed for full and partial vehicle wraps with recesses and compound convex curves. Successful vehicle wrapping requires the correct techniques learned through training and developed through experience to achieve the best results.

Although there are many ways to print a vehicle wrap, we at Metamark, have tried different methods to ensure a perfect wrap application, without failure. Below you will find illustrations of how to set up prints on 2 different vehicles, Further illustrations are available on request

With all vehicle wraps, It is good practice to have magnets to hand and place all prints on the vehicle before applying to ensure alignment

-  Print 1 - Bottom Half Print.
-  Print 2 - Top Half Print - Over lap of approx 20 - 25mm on to bottom print
-  Print 3 - Door will be a vertical drop
-  Print 4 - Wing.
-  Rear Door 1
-  Rear Door 2



For further technical support email [technical@metamark.co.uk](mailto:technical@metamark.co.uk) or call +44 (0)1483 571111

### Metamark (UK) Limited

Luneside • New Quay Road • Lancaster • LA1 5QP • Tel +44 (0)1524 387140 • Fax +44 (0)1524 387147

Metamark House • Octimum Business Park • Forsyth Road • Woking • GU21 5SF • Tel +44 (0)1483 571111 • Fax +44 (0)1483 570540

[sales@metamark.co.uk](mailto:sales@metamark.co.uk)

[www.metamark.co.uk](http://www.metamark.co.uk)